



## GENERAL ASSEMBLY

Item	Part No.	Description
1	003819	Switch Cap
2	003490	Pump Cover
3	049004	Square Cut Ring
4	031285	Key
5	051475	Rotor
6	054026	Seal Group (includes items 7-12)
7	*067210	Washer
8	*057955	Seal Spring
9	*048941	O-ring
10	*049510	Rotating Sealing Ring
11	*048820	Floating Seal Ring
12	*048971	O-ring
13	003210	Pump Block
14	003813	Motor Housing
15	011869	Bearing
16	037405	Field Assy.
17	010907	Armature 12VDC
	010908	Armature 24VDC
18	003814	End Cap
19	012905	Hex Bolt, 5/16-18 X 6 1/2
20	053170	Set Screw, 1/4-20 X 1/2" <i>(NOTE: Covered with silicone to prevent water entry.)</i>
21	003065	Base
22	066655	Check Valve Assy. (includes items 23 to 29)
23	*029155	Valve Guide
24	*068680	Washer
25	*038980	Hex Jam Nut
26	*068650	Washer
27	*024356	Valve Disk
28	*022271	Check Valve Cover Assy.
29	*042370	Cotter Pin
30	062620	Valve Stem
31	062338	Bypass Stem Assy.
32	049001	Square Ring
33	022315	By-pass Cover
34	065725	Tube, By-pass Valve
35	049002	Square Ring
36	063266	Strainer, 30 mesh
37	022900	Strainer Cover
38	067030	Vane
39	052976	Ground Screw (Not Shown)
40	067466	Shim Washer
41	049003	Square Cut Ring

\* Indicates part is a sub-part of preceding part.